

Security Control System

Operator's Manual

 
FOR SERVICE CONTACT



DIRECT ALARM SUPPLIES

GOEL
SERIES

CONTROL KEYPAD

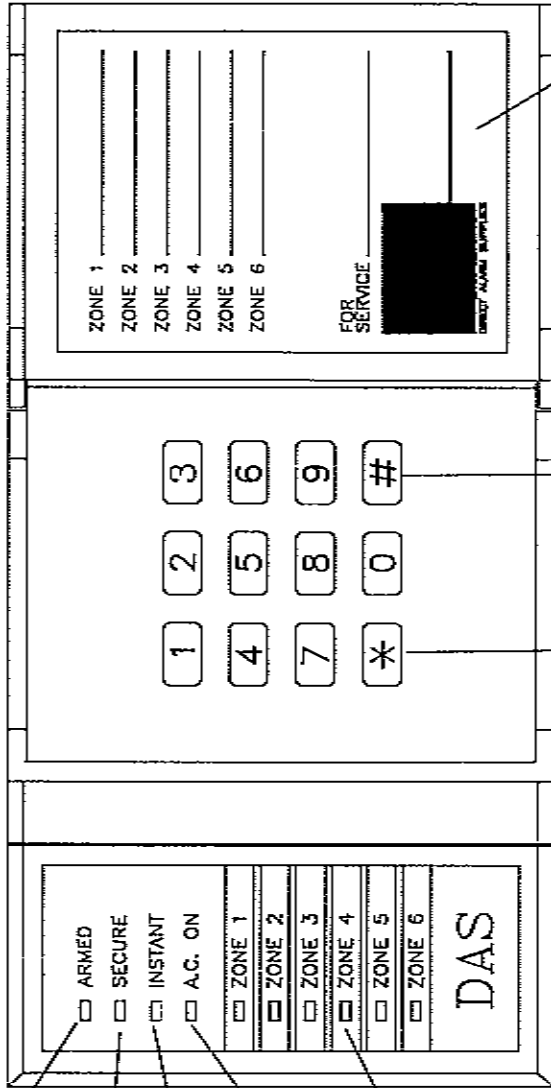

ARMED light indicates system is armed. Flashing ARMED light indicates previous alarm.

SECURE light indicates all zones are secure or isolated, and system is ready to arm.

INSTANT light indicates no instant/exit delay is present.

A.C. light indicates AC power is present to your system.

ZONE lights indicate status of zones. On means zone(s) isolated, flashing means zone(s) open.

ZONE IDENTIFICATION LABEL

POUND button is to reset if an error is made during code entry. Press and re-enter code.

STAR button is used to remove or regain entry/exit delay. This button is also used during zone bypassing.

PANIC/HOLD UP ALARM: If programmed by the installer, pressing the [*] and [#] simultaneously for one second will activate a panic/hold up transmittion, and sound the local siren/bell.

SECURITY SYSTEM NOTES

Installing/Service Company: _____

For Service Call: _____

Security System Configuration

Master Code: _____

Auxiliary Code _____

"Quick Arm" Digit: _____

2. _____

3. _____

4. _____

5. _____

6. _____

Exit Delay Time _____ Auxiliary Exit Delay Time _____

Entry Delay Time _____ Auxiliary Entry Delay Time _____

Fire Alarm Sound _____

Fire Alarm Sound Steady Siren _____, Pulsing Bell _____

Burglar Alarm Sound Yelp Siren _____, Steady Bell _____

Zone Coverage

ZONE 1: _____

ZONE 2: _____

ZONE 3: _____

ZONE 4: _____

ZONE 5: _____

ZONE 6: _____

Emergency Phone Numbers

Fire Dept.: _____

Police Dept.: _____

Monitoring Center: _____

This manual is furnished to help you understand your security system and become proficient in its operation. All users of your security system should read and follow the instructions and precautions in this booklet. Failure to do so could result in the security system not working properly. This booklet should be kept in an accessible location for the life of the security system. If you do not understand any part of the manual you should notify your installing company and ask for that section of the manual to be explained fully.

The SECURITY CONTROL CENTER is turned on (ARMED) and off (DISARMED) by entering a 4 digit code into the Keypad Control, which is similar to a telephone keypad. The Keypad Control includes 10 indicator lights and a built-in electronic sounder. These provide specific information relating to the status of the security system which is described in this booklet. Understanding what the lights and sounds mean will help you to easily operate your system.

SO REMEMBER, READ THE ENTIRE MANUAL, AND, IF POSSIBLE, PRACTICE ON THE KEYPAD CONTROL WHILE YOUR PROFESSIONAL INSTALLER IS AT YOUR BUILDING. IF YOU HAVE ANY QUESTIONS ASK YOUR INSTALLING COMPANY.

PLEASE KEEP IN MIND THAT THE LEVEL OF SECURITY YOU WILL OBTAIN WITH THIS SYSTEM RELATES SPECIFICALLY TO TWO MAJOR FACTORS:

1. THE QUANTITY, QUALITY, AND PLACEMENT OF SECURITY DEVICES ATTACHED TO THIS SYSTEM.
2. THE KNOWLEDGE YOU HAVE OF THE SECURITY SYSTEM AND HOW THAT KNOWLEDGE IS UTILIZED IN A WEEKLY TEST OF THE COMPLETE SYSTEM.

YOU SHOULD BE AWARE OF THE FOLLOWING FACTS AND USE THEM WHEN PREPARING A SAFETY/SECURITY PLAN FOR YOUR HOME/BUSINESS.

- YOUR SECURITY SYSTEM IS AN ELECTRONIC DEVICE AND IS SUBJECT TO MALFUNCTION OR FAILURE. DO NOT RELY ON IT AS YOUR SINGLE SOURCE OF SECURITY.
- YOUR SYSTEM SHOULD BE TESTED WEEKLY.
- YOUR SYSTEM WILL NOT WORK WITHOUT POWER.
- WARNING DEVICES WILL NEED TO BE LOUD ENOUGH, WIRED CORRECTLY, AND PROPERLY PLACED TO PROVIDE NOTIFICATION OF AN ALARM EVENT.
- SMOKE AND HEAT DETECTORS MAY NOT DETECT FIRE AND SMOKE IN ALL SITUATIONS.
- USE QUALIFIED SECURITY PROFESSIONALS TO SELECT, INSTALL, AND MAINTAIN YOUR SECURITY SYSTEM.
- IT MAY BE POSSIBLE TO ARM THE SECURITY SYSTEM WITHOUT THE BACK-UP BATTERY CONNECTED. YOUR PERIODIC TEST SHOULD BE DONE WITH A.C. POWER REMOVED TO VERIFY THE BATTERY IS CONNECTED AND ADEQUATELY CHARGED.
- CARE SHOULD BE TAKEN TO PLUG-IN AND PROPERLY RESTRAIN THE A.C. TRANSFORMER AFTER TESTING.

PLEASE READ THE FOLLOWING INFORMATION AND INSTRUCTIONS COMPLETELY BEFORE OPERATING YOUR SECURITY CONTROL SYSTEM. IF YOU DO NOT UNDERSTAND ANY PORTION OF THIS MANUAL, OR IF YOU HAVE ANY QUESTIONS ABOUT YOUR SYSTEM, CONTACT THE INSTALLING COMPANY LISTED ON PAGE 1 OF THIS BOOKLET.

HOW TO ARM YOUR SECURITY SYSTEM

To turn the security system on, close all of the protected doors and windows. The green "SECURE" light on the keypad Control will be illuminated when all the protected areas and sensors are secure. If any of the zones are isolated, a sensor in that zone can be violated without affecting the "SECURE" light.

The Security System will not arm if the "SECURE" light is not illuminated. With the "SECURE" light on, you may arm the Security System with your master code or one of the Auxiliary Codes.

Each time a key is pressed on the Keypad Control, a short tone, (beep) will sound. If the Keypad Control sounds (beeps) three (3) times after code entry, it is an indication that the code has not been accepted. Press the reset [#] key and re-enter a valid code.

If the Keypad Control sounds (beeps) continuously after code entry, it is an indication that the "A. C." light is off, or of another Trouble condition. The keypad sounder can be silenced by re-entering your 4-digit code. If the "A.C." light is out, you should restore power if possible. If the "A.C." light is on, press the [#] key (reset), wait 10 seconds and re-enter your 4 digit code. If you are unable to correct the above conditions contact the installing company listed on page 1 of this booklet for service.

When the Security System has accepted a valid code, the red "ARMED" light will illuminate, indicating that the system has been turned on. If you choose to leave the protected area, you must exit through the predesignated ENTRY/EXIT door(s). If you remain inside the protected area, insure that all interiors zones which may be tripped by your movement are isolated.

AUTOMATIC ISOLATE ARMING

If the "AUTOMATIC ISOLATE" option has been selected by your installing company, all interior zones will automatically isolate if you "ARM" your security system and do not exit through a designated entry/exit door. The "AUTOMATIC ISOLATE" will occur at the end of the exit delay time. At this time, all isolated zone lights will become illuminated. With the interior zones isolated, occupants are allowed freedom of movement inside of the home/business while the security system is "ARMED".

INSTANT/DELAY OPTION

If your security system is "ARMED" and you DO NOT wish to have a delay on your entry/exit doors, this can be accomplished by pressing the [*] key on your keypad. At this time, the "INSTANT" light will become illuminated and there will be no entry/exit delay present. Any time the "INSTANT" light is on, the opening of an entry/exit door will cause an immediate alarm, making this feature ideal for use at night, or when no authorized entries or exits are anticipated. By pressing the [*] key again, the "INSTANT" light will go off, and an ENTRY delay will become present on designated entry/exit doors.

NOTE: Your installing company may have programmed the "INSTANT" option to occur in conjunction with the "AUTOMATIC ISOLATE" feature. In this case, the "INSTANT" light and the isolated zone lights will become illuminated at the end of the exit delay. If this occurs, you still have the ability to turn off/on the "INSTANT" feature by pressing the [*] key.

HOW TO DISARM YOUR SECURITY SYSTEM

When you enter the protected area through one of the designated entry/exit doors, the Keypad Control will sound a continuous tone (beep) for the duration of the entry delay time or until you enter a valid code. After a valid code is entered, the red "ARMED" light will then go out and the tone will stop. The security system is now disarmed. If a valid code is not entered before the end of the entry delay time, an alarm will occur. (NOTE: IF THE RED "ARMED" LIGHT IS FLASHING AT ENTRY, THE ALARM HAS BEEN ACTIVATED IN YOUR ABSENCE. LEAVE THE BUILDING IMMEDIATELY AND CALL YOUR ALARM COMPANY AND/OR THE POLICE FROM A SAFE LOCATION.)

HOW TO ISOLATE ZONES

To isolate any of the zones 1-6, disarm the control and press star (*), zone NUMBER(S) to be isolated, and star [*]. Zones cannot be isolated if the control is armed. When the Security System is disarmed, all isolated zones will clear to the normal status. As isolated zones are unprotected, this procedure should not be given to unauthorized persons.

MANUAL PANIC/HOLD-UP ALARM

When the star [*] and pound [#] keys are pressed at the same time for one (1) second, the local audible alarm will sound. These keys should only be pressed in an emergency situation requiring immediate response by law enforcement personnel.

MANUAL FIRE ALARM

If the "MANUAL FIRE" option has been selected by your installing company, you can activate the steady siren or pulsing bell by pressing the one [1] and three [3] keys at the same time for one (1) second. These keys should only be pressed in an emergency situation requiring response by fire department personnel.

FIRE ZONE

When local fire codes allow it, your security system may have one or more zones configured as a "FIRE" zone. When this option is selected, and approved smoke or heat detectors are attached to the selected zone(s), a unique audible sound can be initiated from the security system. You should familiarize your family or staff with this sound and follow an evacuation plan if this fire warning sound is heard.

To silence the audible fire alarm, enter a valid code. To reset the smoke detector press the "RESET" [#] key. After 10 seconds the zone light designated for "FIRE", and the light on the affected smoke detector should turn off. If you are unable to reset your system after the smoke detector chamber has been cleared of smoke, you should immediately call the service phone number listed on page 1 of this booklet.

PROGRAMMING ACCESS CODES

The Security System can be armed and disarmed by the Master Code (User Code #1) and up to five (5) Auxiliary Codes. All codes must have four (4) digits. These Auxiliary codes are individually numbered from 2 to 6. If Auxiliary Codes are desired, they must be programmed individually. Only persons knowing the Master Code (User Code #1) can assign or change Auxiliary codes. (See programming Auxiliary codes below.)

CHANGING THE MASTER CODE - The Master Code is user code #1 and must be programmed by referring to its code number. For example, if the Master Code is [1][2][3][4] and you want to change it to [5][3][4][2], the sequence would be as follows: Press [*][1][#]. (This enters programming for user code #1) then [1][2][3][4] (old Master Code) Press [*][1][#], verifying that user code #1 is being changed, then new code [5][3][4][2]. Now end this sequence by pressing [*][1][#] to exit programming.

The entire sequence would consist of pressing 17 keys as follows;

[*][1][#] - [1][2][3][4] - [*][1][#] - [5][3][4][2] - [*][1][#]

PROGRAMMING AUXILIARY CODES - In order to program Auxiliary Codes you must know the Master Code. As stated earlier, each Auxiliary Code has its own unique number from 2 to 6 and must be referred to by its' number. It is programmed much like the Master Code. For example, to program Auxiliary Code #2 the sequence would be as follows;

[*][2][#] - [5][3][4][2] - [*][2][#] - [][][][] - [*][2][#]
(New Code)

REMOVING AUXILIARY CODES - To remove an Auxiliary Code simply program it to be the Master Code. For example, to remove user code #2, the sequence would be as follows;

[*][2][#] - [5][3][4][2] - [*][2][#] - [5][3][4][2] - [*][2][#]

User code #2 has now been eliminated.

DURESS CODE - Your Security System may include a "DURESS" option. Check with your installing/service company to determine if this feature has been enabled for your system.

"QUICK-ARM" FEATURE

Your security system may have a "QUICK ARM" Code programmed. If so, this feature will allow you to arm the Security System by pressing one pre-designated key on the keypad. This "QUICK ARM" code is for Arming Only and will not disarm the Security System. This makes it ideal for a maid code, babysitter code, etc. This code can only be programmed and changed by your installing company.

TURNING ON THE ZONE ANNUNCIATION FEATURE

Your Security Control Center will operate in the "ZONE ANNUNCIATION" mode to allow the monitoring of selected perimeter doors and windows and designated interior areas while the Security System is not armed.

While in the "ZONE ANNUNCIATION" mode, the opening of perimeter doors or windows, or a violation of designated interior areas will cause the Keypad Control to sound (beep) for one second.

To use this feature, press the first digit of the Master Code. In five seconds the Keypad Control will sound (beep) indicating that this feature has been enabled. To turn this feature off, press the first digit of the Master Code. In five seconds the Keypad Control will sound (beep), indicating that this feature has been turned off.

AUDIBLE ALARM SOUNDS

- FIRE: Steady siren or pulsing bell
- INTRUSION & PANIC/HOLD-UP: Yelp siren or steady bell (when programmed with Audible capability)

KEYPAD CONTROL LIGHT INDICATORS

- ARMED - (red) On when system is armed; off otherwise. Blinks as alarm memory if alarm was activated during the previous arming cycle.
- SECURE - (green) On when zones 1 through 6 are good or isolated and the system is ready to arm; off otherwise.
- INSTANT - (red) On when the entry/exit zones are instant; off otherwise.
- A. C. - (red) On when AC power is on; off otherwise.
- ZONES 1 - 6 (yellow) On when isolated; blinking when faulted; off otherwise.

KEYPAD CONTROL TONES (BEEPS)

A sounder is built into the keypad and will sound for the following reasons:

- Beeps for all key presses.
- Sounds continuously during entry delay.
- Pulses when a "Day Zone" is violated, a zone configured for fire has a trouble condition, or when the armed status changes and the "A. C." light is off. It will also pulse when a zone light designated as a fire zone is on steady from a previous alarm, or blinking as a result of a previous fire trouble condition. When pulsing it can be silenced by entering a valid code. (The armed state of your security system will not change when a valid code is entered to silence the pulsing sounder.)
- 3 beeps for trying to arm when a faulted zone is not isolated.
- Beeps 1 second for Zone Annunciation and when this feature is activated or deactivated.
- 3 Beeps when errors are made reprogramming codes.
- Beeps 1 second at the end of the exit delay.

RESETTING YOUR SECURITY CONTROL CENTER

In the event of a system malfunction in the Security Control Center, press the reset key [#] located on the Keypad Control for one (1) second. This should reset the code sequence and restore normal operation. If the problem persists, call the service number located on page 1 of this booklet for service.

TESTING YOUR SECURITY SYSTEM

There are several tests you should perform on a periodic basis (at least once a week) to insure that your Security System is functioning properly.

- Enable the "ZONE ANNUNCIATION" feature and open all protected windows and doors. The Keypad Control should sound (beep) for each device and the appropriate yellow zone light should blink.
- Walk into all areas protected by motion detection devices while someone observes the Keypad Control. The appropriate yellow zone light should blink for each sensor tested.
- If your system has a "FIRE" zone, the Smoke or Heat detectors should be tested at least monthly.
- If the Siren/Bell test option has been selected by your installing company, you may activate the siren/bell by pressing the one [1] and seven [7] keys at the same time for one second. To silence the siren/bell enter your 4 digit master or auxiliary code.

IF ANY OF THE ABOVE TESTS ARE NOT SUCCESSFUL OR THE RESULTS UNCLEAR, CONTACT YOUR SERVICE COMPANY AT THE PHONE NUMBER LISTED ON PAGE 1 OF THIS BOOKLET.

TURNING ON THE ZONE ANNUNCIATION FEATURE

Your Security Control Center will operate in the "ZONE ANNUNCIATION" mode to allow the monitoring of selected perimeter doors and windows and designated interior areas while the Security System is not armed.

While in the "ZONE ANNUNCIATION" mode, the opening of perimeter doors or windows, or a violation of designated interior areas will cause the Keypad Control to sound (beep) for one second.

To use this feature, press the first digit of the Master Code. In five seconds the Keypad Control will sound (beep) indicating that this feature has been enabled. To turn this feature off, press the first digit of the Master Code. In five seconds the Keypad Control will sound (beep), indicating that this feature has been turned off.

AUDIBLE ALARM SOUNDS

- FIRE: Steady siren or pulsing bell
- INTRUSION & PANIC/HOLD-UP: Yelp siren or steady bell (when programmed with Audible capability)

KEYPAD CONTROL LIGHT INDICATORS

- ARMED - (red) On when system is armed; off otherwise. Blinks as alarm memory if alarm was activated during the previous arming cycle.
- SECURE - (green) On when zones 1 through 6 are good or isolated and the system is ready to arm; off otherwise.
- INSTANT - (red) On when the entry/exit zones are instant; off otherwise.
- A. C. - (red) On when AC power is on; off otherwise.
- ZONES 1 - 6 (yellow) On when isolated; blinking when faulted; off otherwise.

KEYPAD CONTROL TONES (BEEPS)

A sounder is built into the keypad and will sound for the following reasons:

- Beeps for all key presses.
- Sounds continuously during entry delay.
- Pulses when a "Day Zone" is violated, a zone configured for fire has a trouble condition, or when the armed status changes and the "A. C." light is off. It will also pulse when a zone light designated as a fire zone is on steady from a previous alarm, or blinking as a result of a previous fire trouble condition. When pulsing it can be silenced by entering a valid code. (The armed state of your security system will not change when a valid code is entered to silence the pulsing sounder.)
- 3 beeps for trying to arm when a faulted zone is not isolated.
- Beeps 1 second for Zone Annunciation and when this feature is activated or deactivated.
- 3 Beeps when errors are made reprogramming codes.
- Beeps 1 second at the end of the exit delay.

RESETTING YOUR SECURITY CONTROL CENTER

In the event of a system malfunction in the Security Control Center, press the reset key [#] located on the Keypad Control for one (1) second. This should reset the code sequence and restore normal operation. If the problem persists, call the service number located on page 1 of this booklet for service.

TESTING YOUR SECURITY SYSTEM

There are several tests you should perform on a periodic basis (at least once a week) to insure that your Security System is functioning properly.

- Enable the "ZONE ANNUNCIATION" feature and open all protected windows and doors. The Keypad Control should sound (beep) for each device and the appropriate yellow zone light should blink.
- Walk into all areas protected by motion detection devices while someone observes the Keypad Control. The appropriate yellow zone light should blink for each sensor tested.
- If your system has a "FIRE" zone, the Smoke or Heat detectors should be tested at least monthly.
- If the Siren/Bell test option has been selected by your installing company, you may activate the siren/bell by pressing the one [1] and seven [7] keys at the same time for one second. To silence the siren/bell enter your 4 digit master or auxiliary code.

IF ANY OF THE ABOVE TESTS ARE NOT SUCCESSFUL OR THE RESULTS UNCLEAR, CONTACT YOUR SERVICE COMPANY AT THE PHONE NUMBER LISTED ON PAGE 1 OF THIS BOOKLET.